

## Adjustment of laser

1) Find the center of bottom heater



2) Step 1. If necessary adjust the upper head  
Step 2. Unscrew the bolts on both sides.



3) Adjust the laser to be as near as possible to the center. Tight the laser fixing screws back.



More info:

<http://www.skailoks.lv/shop/index.php?c=90&p=3412&l=eng>